



QK-ISFOND

Anti crash-swivel for automatic barriers



Compatible with automatic barriers with maximum boom length of 4m

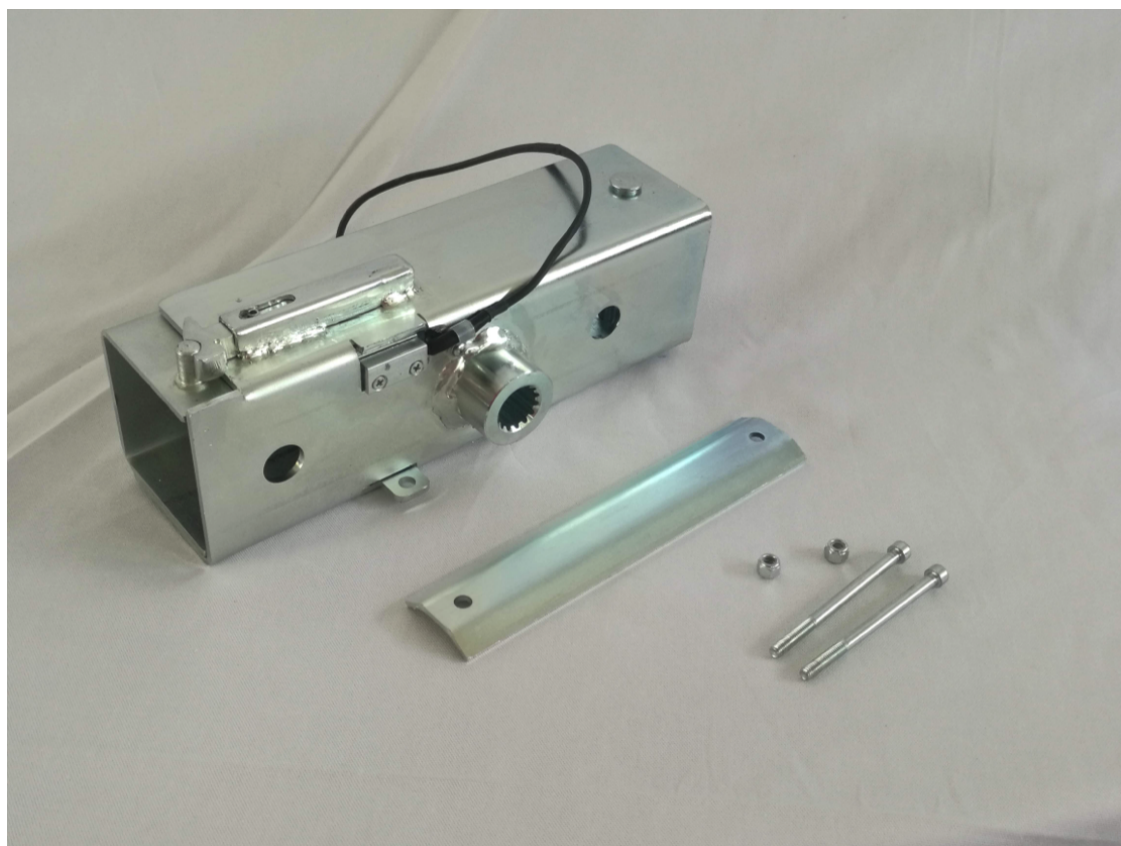

qui  **lö**®
opening solutions


use and maintenance manual

Step-by-step installation instruction:


- 1) Take all components of the swivel out of the box as per image 1
- 2) Take the plate and place it on one side of the boom of the barrier, as per image 2
- 3) Make sure the distance between the 2 arrows marked on image 3 is 34mm
- 4) Fix the plate with a tool and make first hole on the boom as per image 4
- 5) Make second hole on the boom as per image 5
- 6) Remove the tool and the plate and place the boom vertically inside the swivel as per image 6
- 7) Make sure the 2 holes on the boom find the 2 holes on the swivel perfectly as per image 7
- 8) Insert the 2 supplied screws and leave them loose as per image 8
- 9) Turn the swivel on the other side and insert the plate inside as per image 9
- 10) Make sure the holes of the plate gets centered with the holes of the swivel as per image 10
- 11) Make another 2 holes (opposite to the ones you did before) on the boom as per image 11 and 12
- 12) See point 11
- 13) Push the 2 screws from the other side so that they come out from the 2 new holes as per image 13
- 14) Fasten them with the supplied nuts
- 15) Open the swivel pressing the apposite lever as per images 15 and 16
- 16) See point 16
- 17) Make sure that the barrier is in open position and remove the plate by removing the screw indicated in image 17
- 18) By means of the same screw you removed from barrier, fix the swivel instead of the pre-existing barrier plate as per images 18-19
- 19) See point 18
- 20) If an higher security level is requested, use a padlock in the position mentioned on image 20
- 21) Connect the 2 normally closed contact cables coming from the swivel to the stop input terminal of control board, so that when an accident happens, the control board will stop the barrier.




Compatible with automatic barriers with maximum boom length of 4m

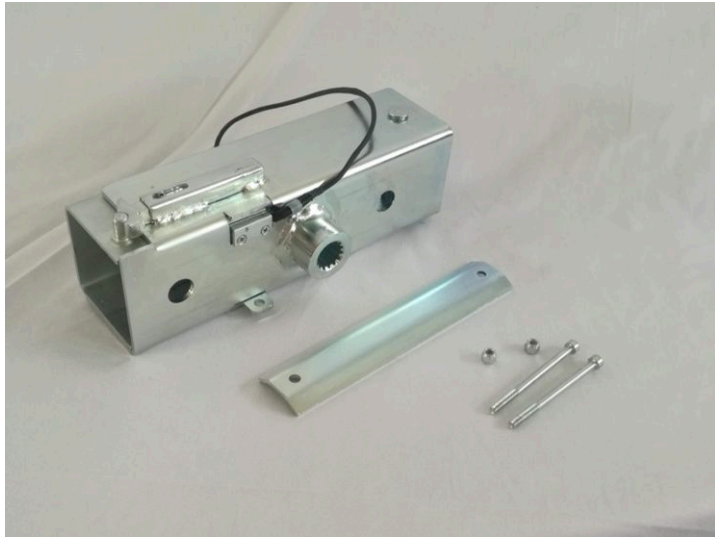


1

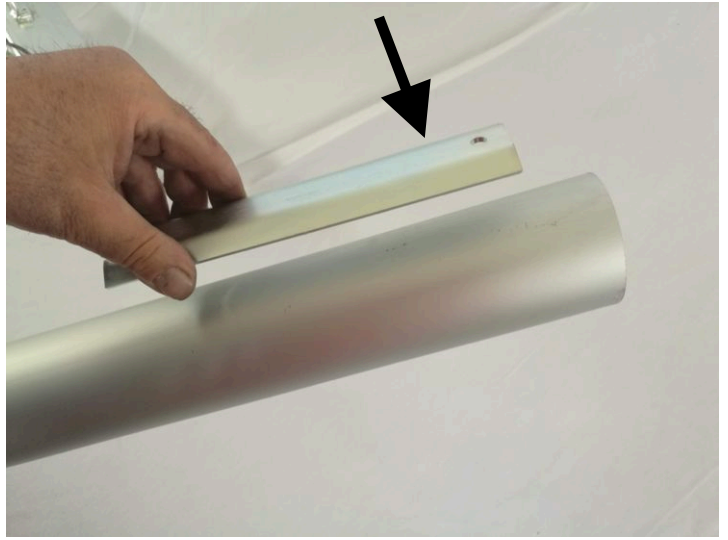


2

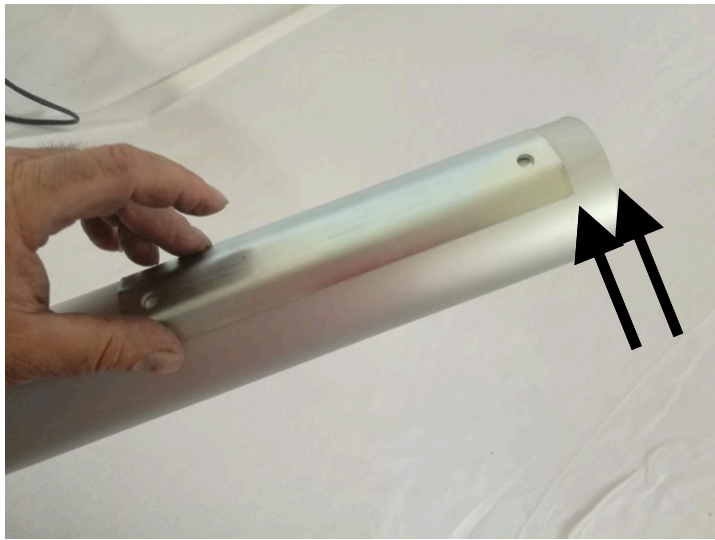


3

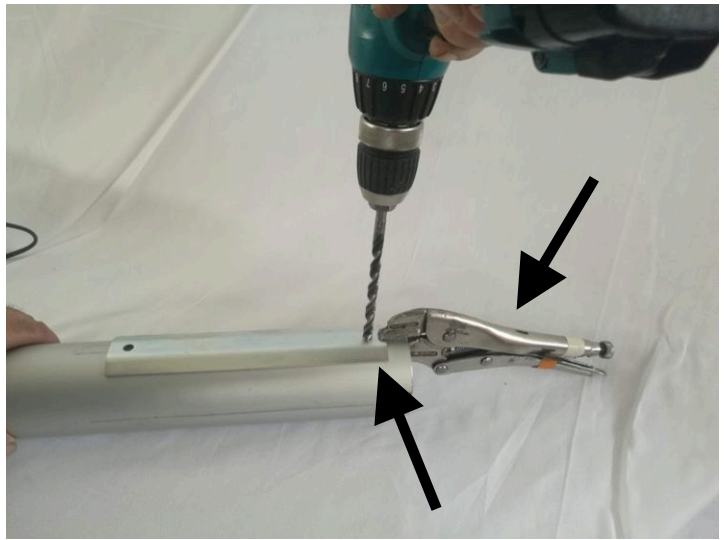


4

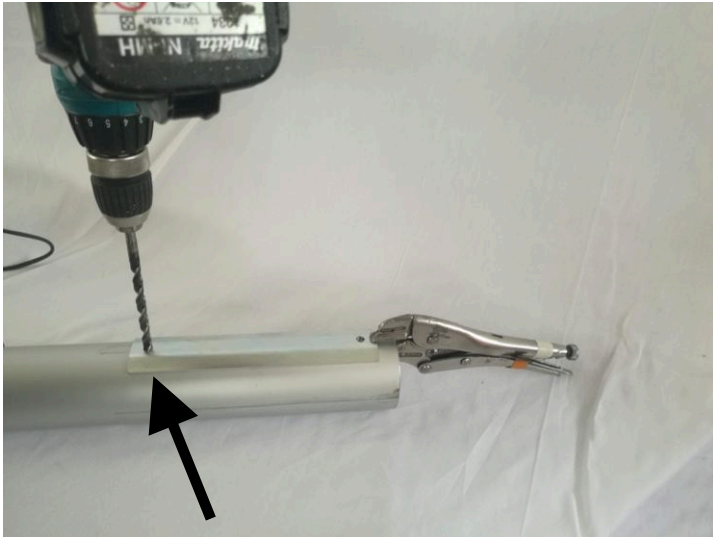


5

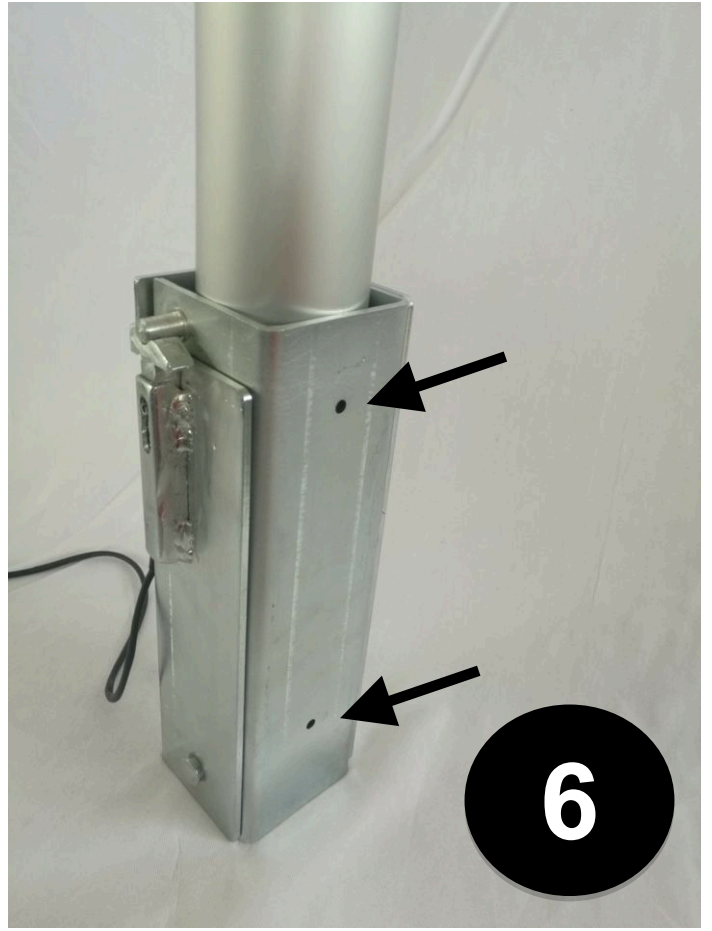





6

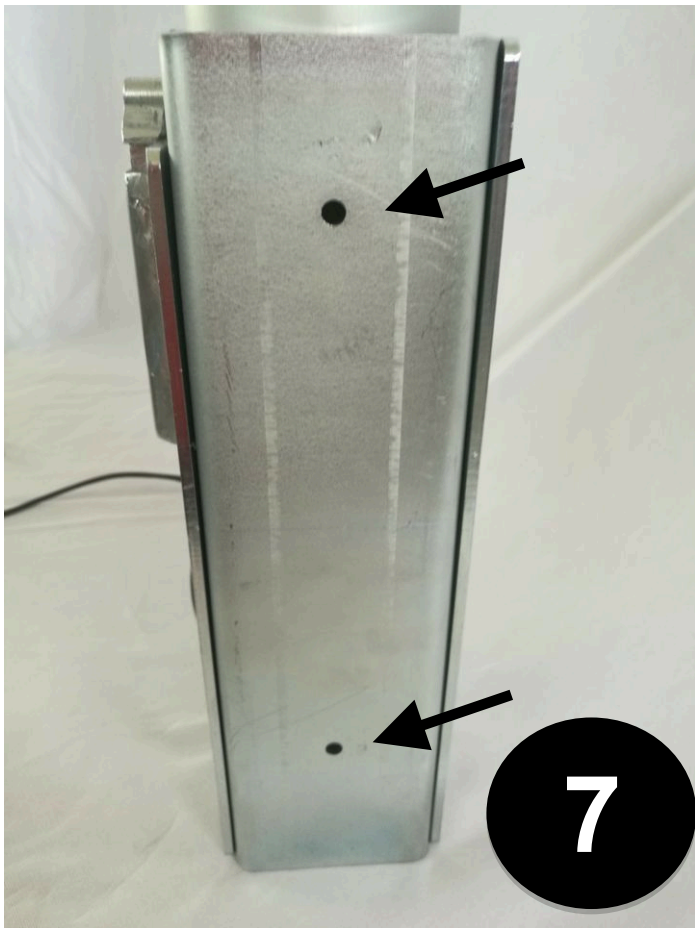



7

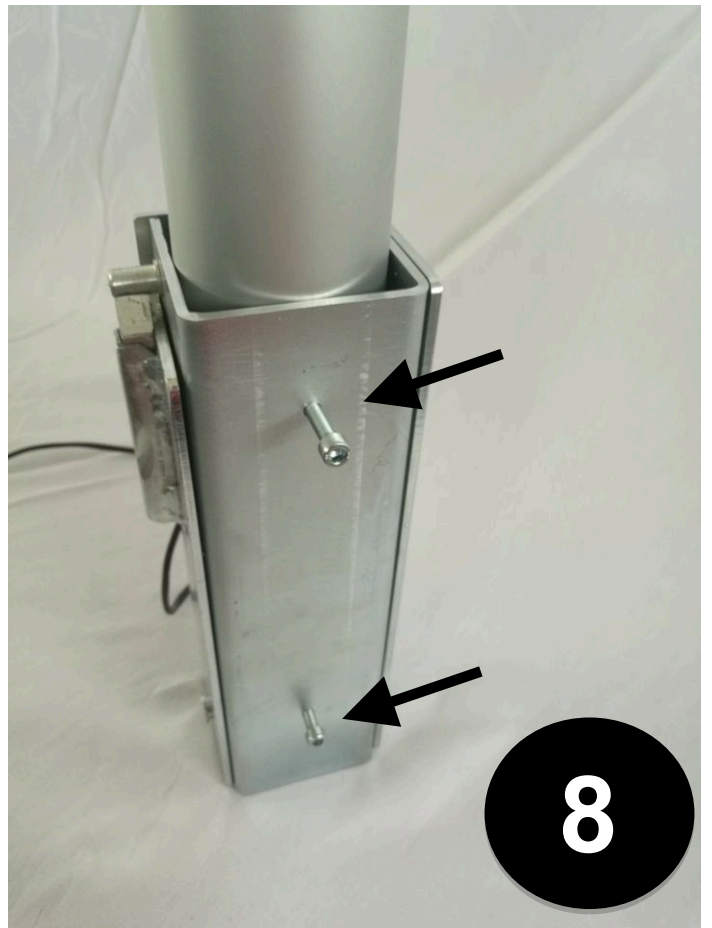

8

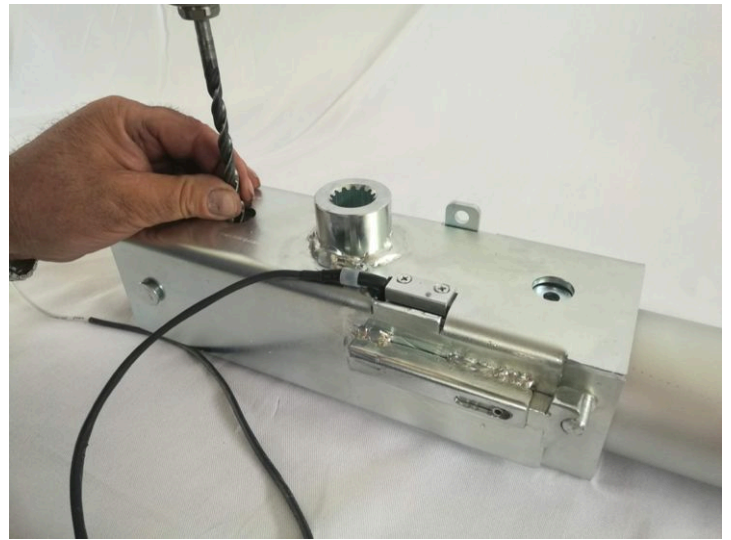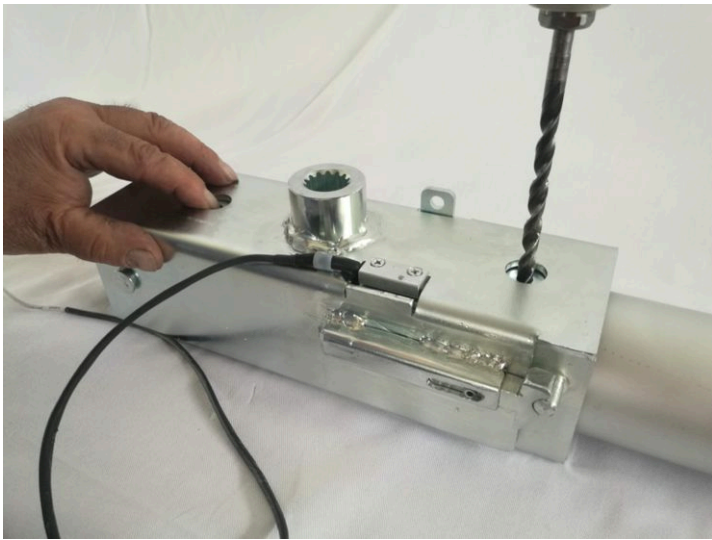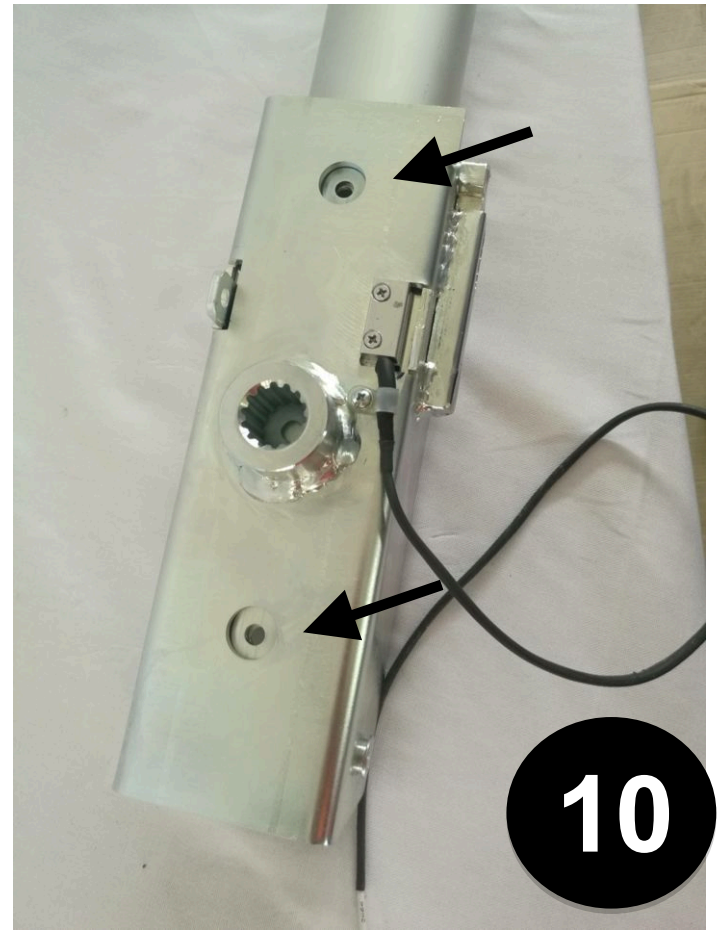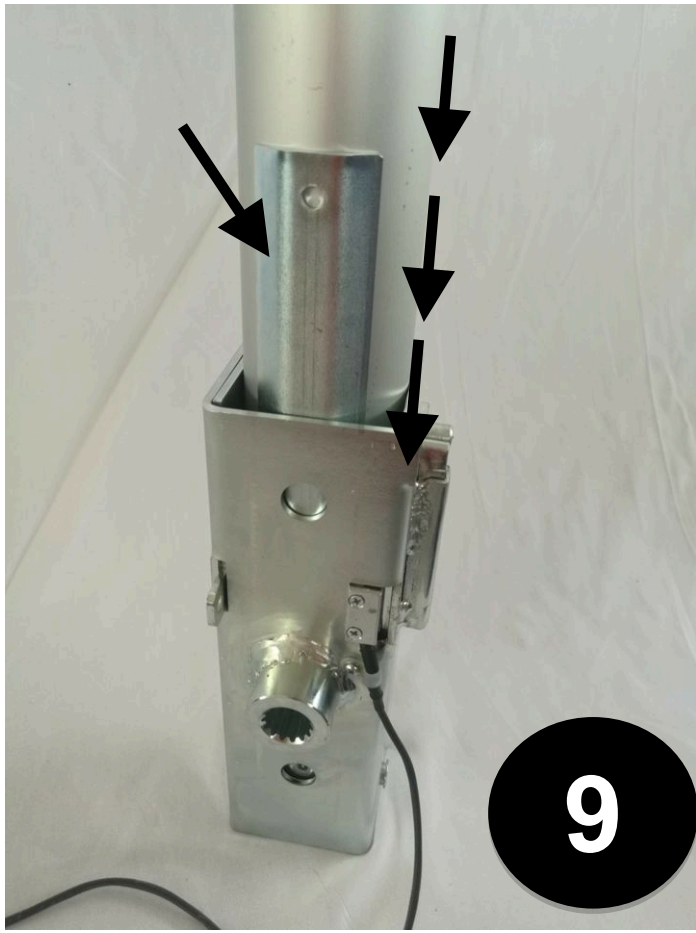

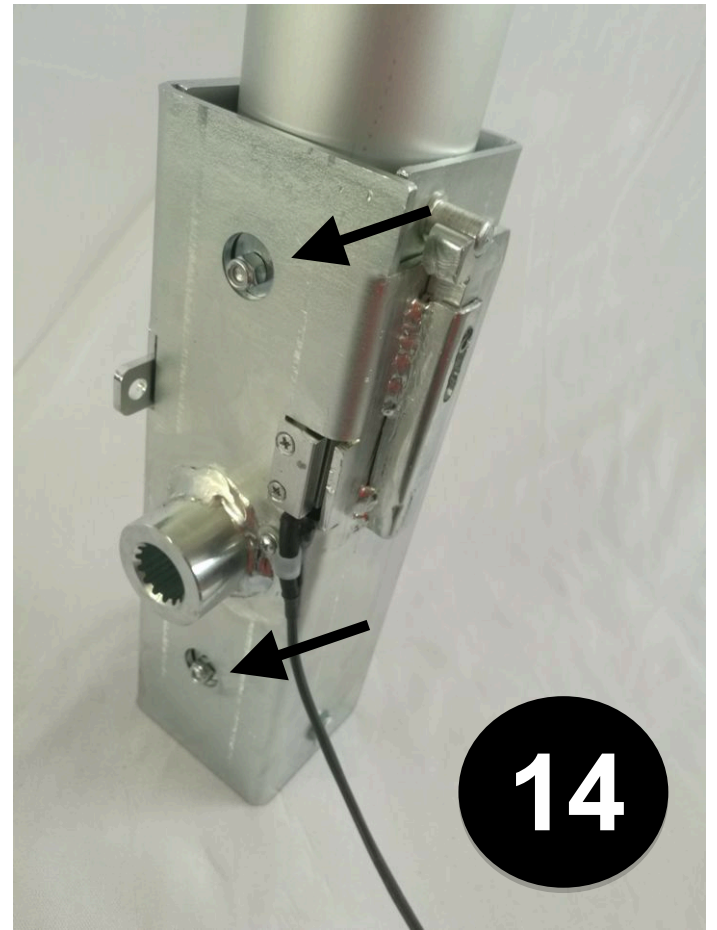

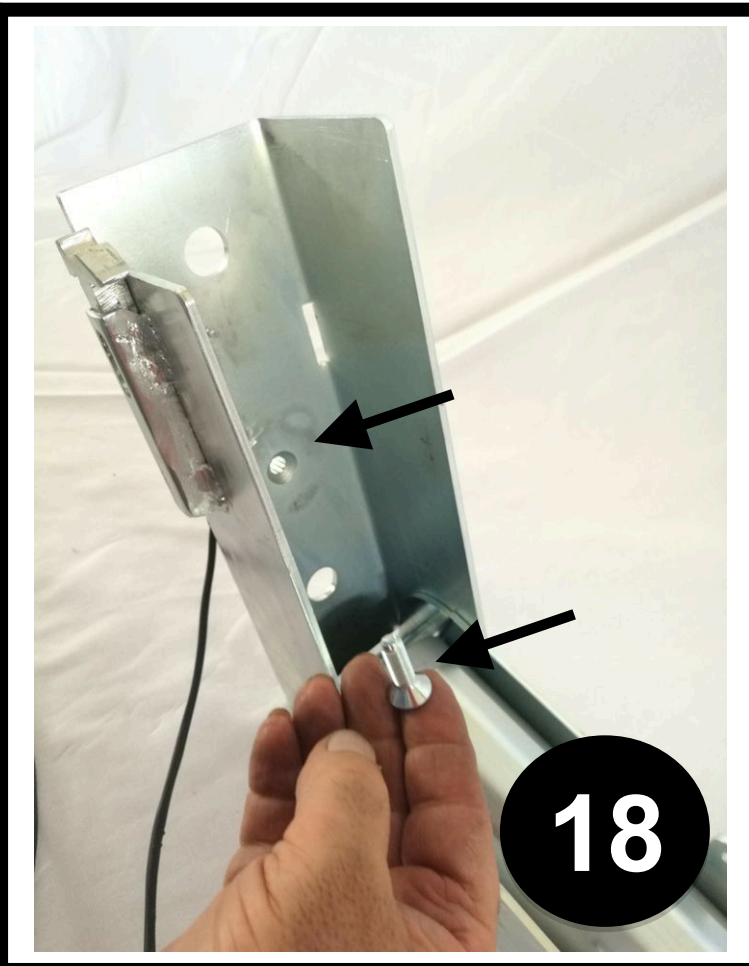



QUIKO ITALY

Via Seccalegno, 19
36040 Sossano (VI) - Italy
Tel. +39 0444 785513
Fax +39 0444 782371
info@quiko.biz
www.quikoitaly.com



*The Manufacturer can technically improve
the quality of its products without
any prior notice.*